


Suspended Grid Mount | 707 | ZipTwo® Square 3535 | Remote Power | Suspended Ceiling Clip | with vodeCONNECT Integrated Sensor


Please read instructions in their entirety before proceeding with any part of the installation. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. Consult a qualified electrician to ensure correct branch circuit rating. To prevent electric shock, disconnect all power before installing or servicing product. Rated for use in dry and damp locations only. Retain instructions for future reference.

Technical Support: 707.996.9898 or technicalsupport@vode.com

Installed View

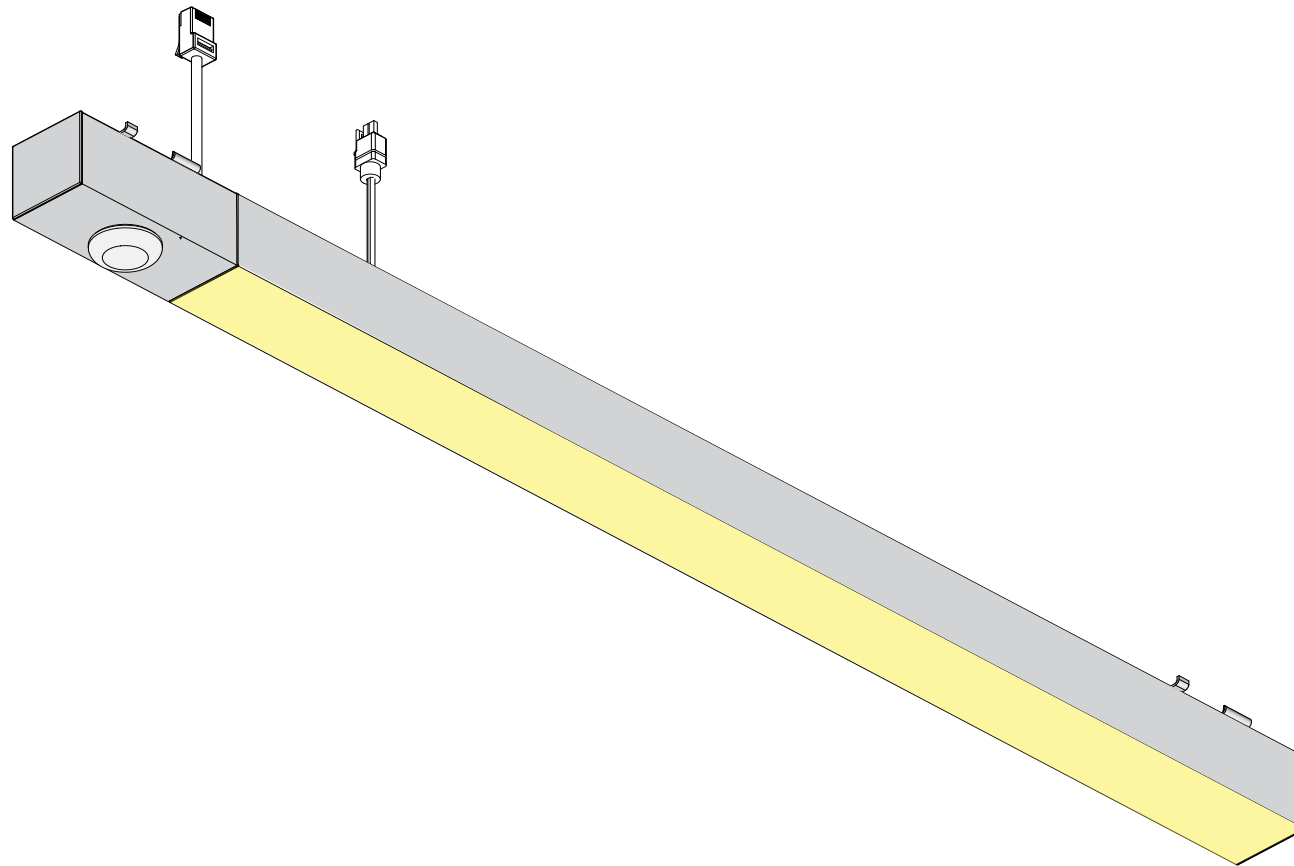


Parts Diagram

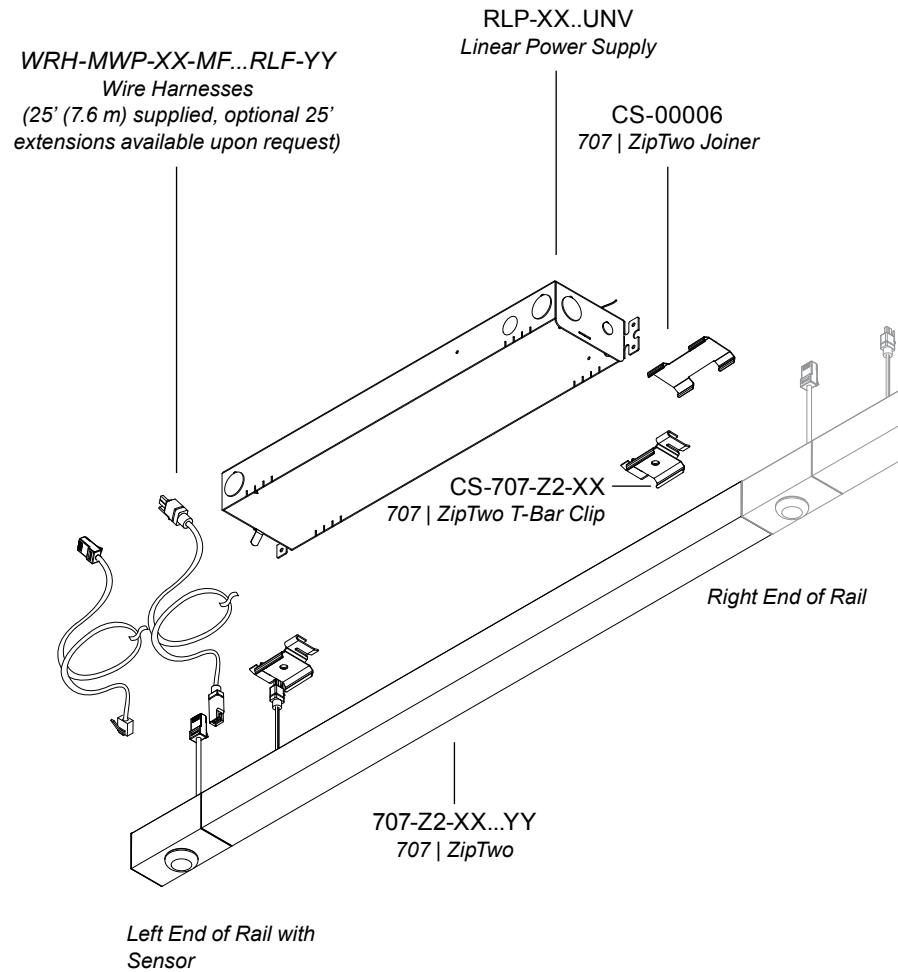


ZipTwo Joiner

A Joiner clip is provided to align rails for a continuous ZipTwo system. Install Joiner clips to rails before mounting rails to the mounting clips.

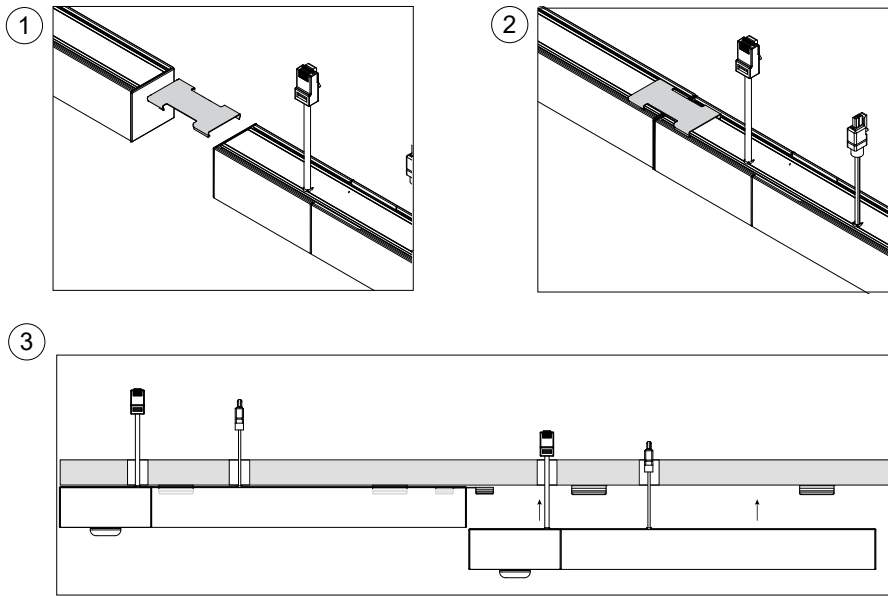

Fixture Orientation

Power feeds come out of the bottom of the fixture as shown. Refer to Power Feed Distance Table for dimensions from power feed to end of fixture.

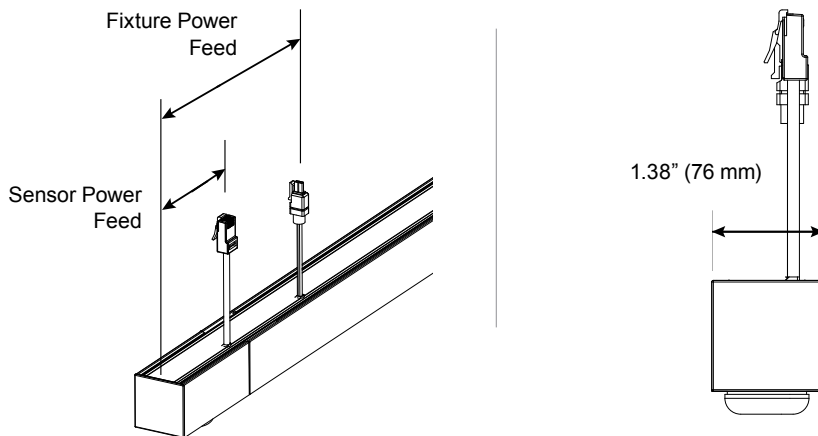

Power Feed Distance From End of Fixture

Sensor	Sensor Power Feed	Fixture Power Feed
Enlighted Micro Sensor	2.7" (68.6 mm)	6.2" (157.5 mm)
Encelium SensiLUM	2.7" (68.6 mm)	6.2" (157.5 mm)
Legrand Wattstopper	2.7" (68.6 mm)	6.2" (157.5 mm)
Lutron Athena	2.7" (68.6 mm)	6.2" (157.5 mm)
Lutron Vive	2.7" (68.6 mm)	6.2" (157.5 mm)
nLight Air	2.7" (68.6 mm)	6.2" (157.5 mm)
nLight Wired	5.3" (134.6 mm)	9' (228.6 mm)

Sensor Power Cable Type



Sensor	Sensor Power Cable Type
Enlighted Micro Sensor	Cat 5e Cable
Encelium SensiLUM	4 Conductor Wire Harness
Legrand Wattstopper	2 Conductor Wire Harness
Lutron Athena	4 Conductor Wire Harness
Lutron Vive	2 Conductor Wire Harness
nLight Air	4 Conductor Wire Harness
nLight Wired	Cat 5e Cable

T-Bar Clip (T1, T2, T3, T4, T5)

Fixtures will be supplied with two clips for rails under 48", four clips for rails 48" to 72" and six clips for 96" rails. Position two clips 4" (102mm) from each end of the fixture and evenly space the remaining clips.

Determine location of fixture and sensor wire harness and notch T-Bar/Panel, as necessary. Install driver and wiring per instructions (see appendix). Install T-Bar clips by pressing clip against T-bar and twisting clockwise. Connect fixture and sensor wire harnesses to power wire harnesses, then insert fixture into installed clips by centering fixture and pressing firmly. For multi-rail systems, see ZipTwo Joiner instructions, page 2.


See tech sheets and Vode Clip Guide for more information on each clip option.

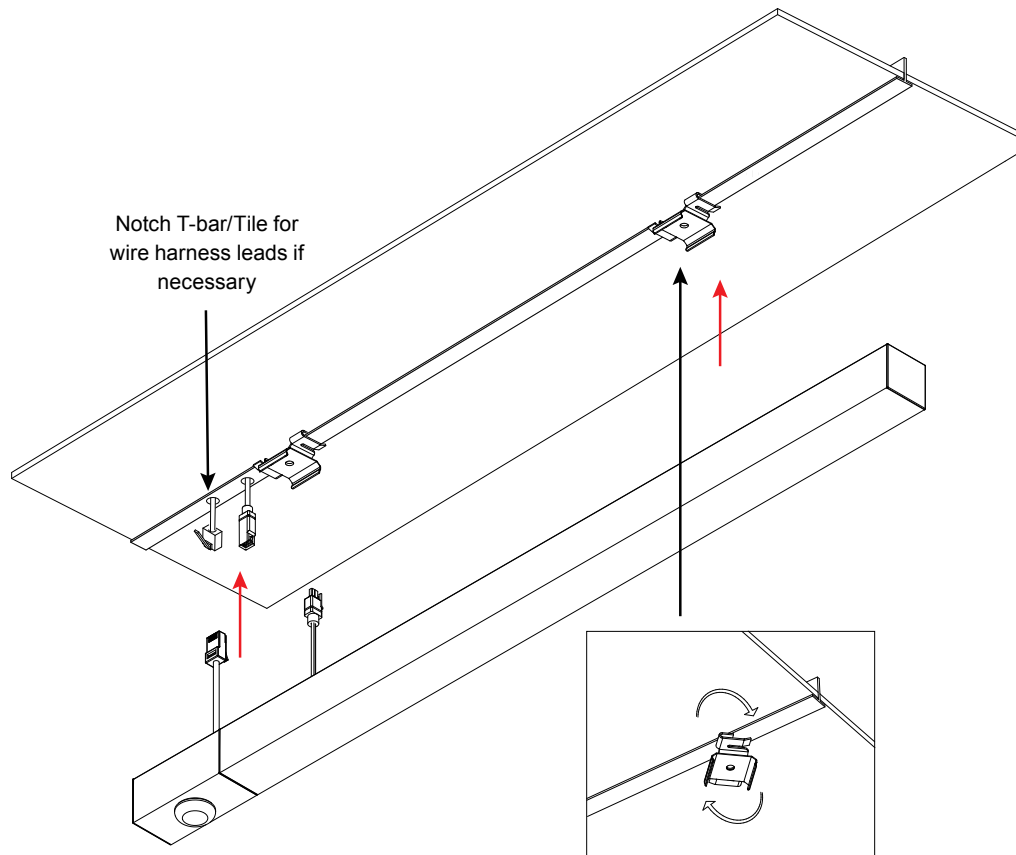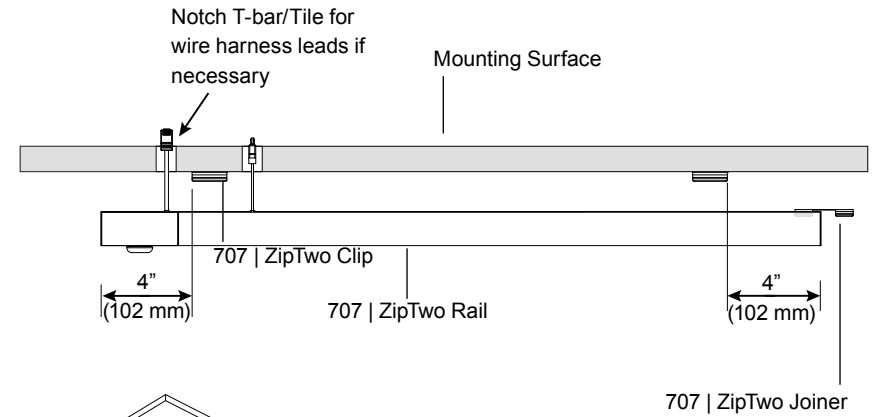

T-Bar Clip (T6 - 1/8" Silhouette)

Step 1: Prep T-Bar for Installation


Using a router or cutters, open up the slot enough to allow the nut to slide into the channel. The provided nut is only 1/4" wide, so the channel will only need to be opened 1/8". Use care to not remove too much of the channel. Vode recommends about a 2" long opening behind locations of a light.

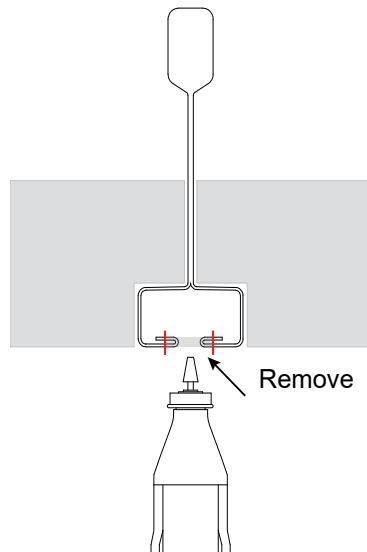

Step 2: Install Clip to T-Bar

Assemble the clip, as shown below. Do not screw on nut completely. Install nut as shown, beveled edge to be facing up.


Keep nut parallel to slot in T-Bar. Insert nut into the slot and turn the 90°. Once the nut is in place tighten screw. DO NOT over tighten as this could deform the clip and not allow for installation. Slide all brackets to desired location through opening in T-bar made during step 1.

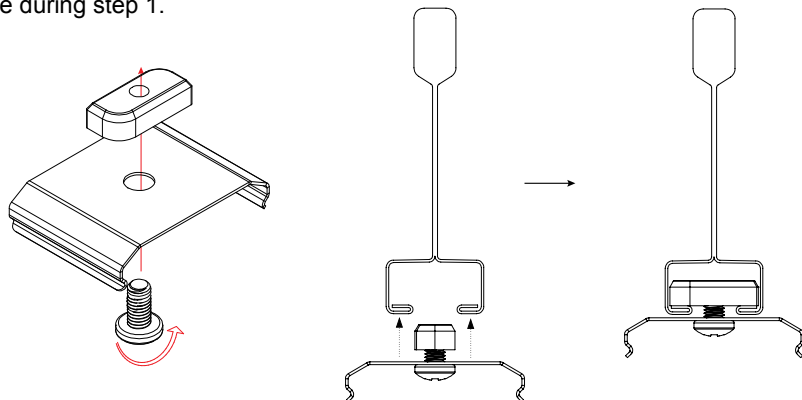

Step 3: Install Fixture

Fixtures will be supplied with two clips for rails under 48", four clips for rails 48" to 72" and six clips for 96" rails. Position two clips 4" (102mm) from each end of the fixture and evenly space the remaining clips.

Determine location of fixture and sensor wire harness and notch T-Bar/Panel, as necessary. Install driver and wiring per instructions (see appendix). Connect fixture and sensor wire harnesses to power wire harnesses. Insert fixture onto installed clips by inserting back edge of fixture to installed clips, then carefully snapping front edge on. For multi-rail systems, see ZipTwo Joiner, page 2.

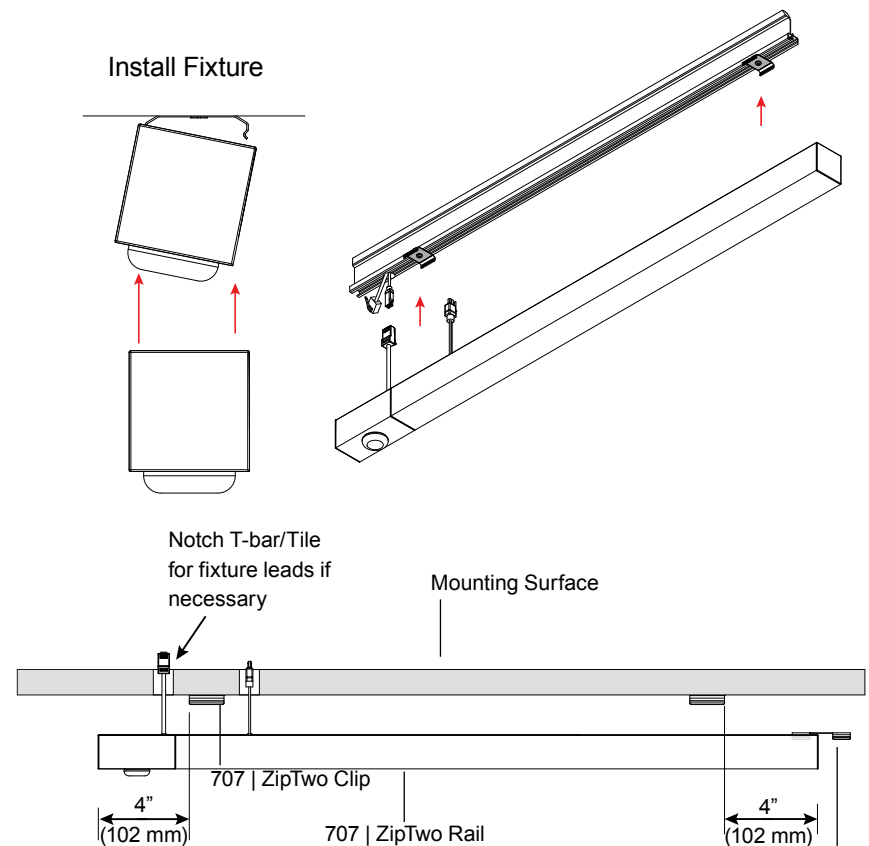


707 | ZipTwo Joiner

T-Bar Clip (T6 - 1/4" Silhouette)

Step 1: Assemble Clips


Assemble the clip, as shown below. Do not screw on nut completely.

NOTE: Install nut as shown, beveled edge to be facing up.

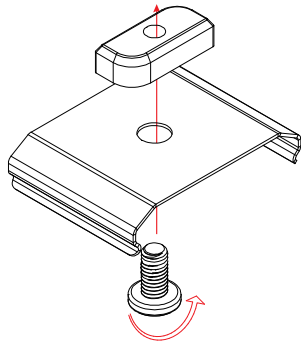

Step 2: Install Clip to T-Bar


Keep nut parallel to slot in T-Bar. Insert nut into the slot and turn the 90°. Once the nut is in place tighten screw. DO NOT over tighten as this could deform the clip and not allow for installation.

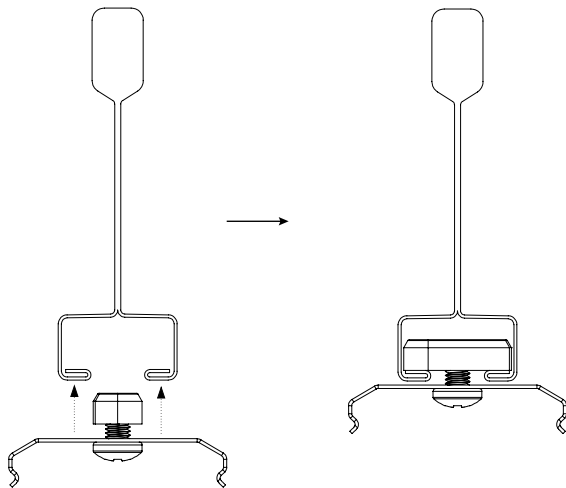

Step 3: Install Fixture

Fixtures will be supplied with two clips for rails under 48", four clips for rails 48" to 72" and six clips for 96" rails. Position two clips 4" (102mm) from each end of the fixture and evenly space the remaining clips.


Determine location of fixture and sensor wire harness and notch T-Bar/Panel, as necessary. Install driver and wiring per instructions (see appendix). Connect fixture and sensor wire harnesses to power wire harnesses. Insert fixture onto installed clips by inserting back edge of fixture to installed clips, then carefully snapping front edge on. For multi-rail systems, see ZipTwo Joiner, page 2.

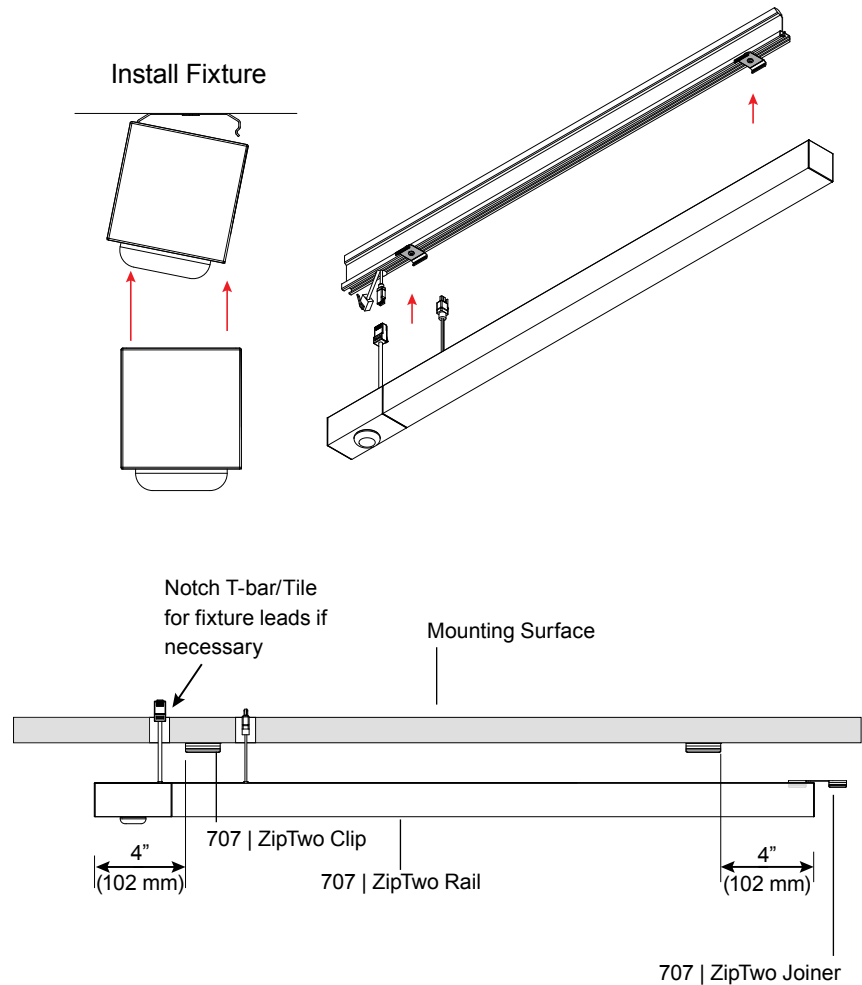

T-Bar Clip (T7)

Step 1: Install Clip to T-Bar


Drill 7/64" pilot holes in desired clip locations on T-Bar. Using screws provided, insert screw through clip and gently install the clip onto the T-Bar by threading screw into pre-drilled pilot holes. DO NOT over tighten as this will deform the clip or T-Bar and will not allow for the rail to be installed properly. Contractor may need to drill a pilot hole for ease of installation.

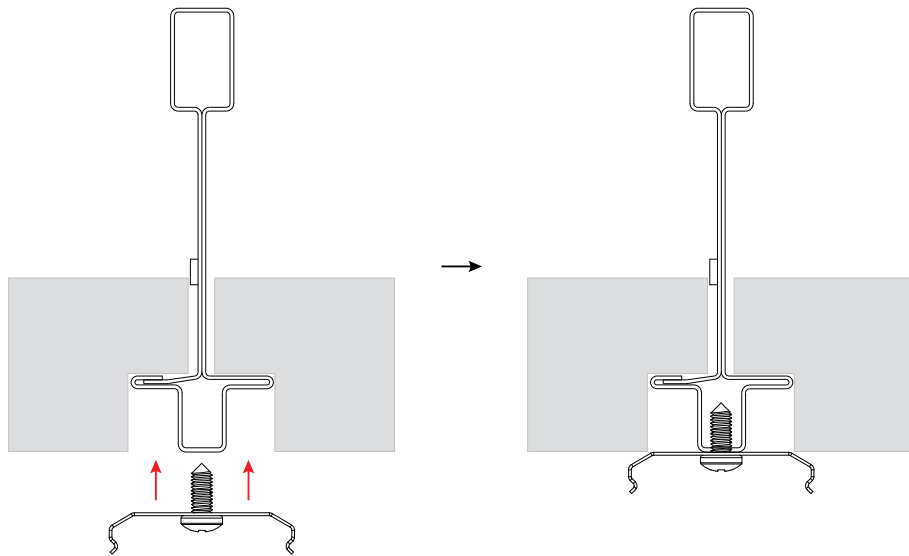

Step 2: Install Fixture

Fixtures will be supplied with two clips for rails under 48", four clips for rails 48" to 72" and six clips for 96" rails, 8 clips for rails 108"-144". Position two clips 4" (102mm) from each end of the fixture and evenly space the remaining clips.

Determine location of fixture and sensor wire harness and notch T-Bar/Panel, as necessary. Install driver and wiring per instructions (see appendix). Connect fixture and sensor wire harnesses to power wire harnesses. Insert fixture onto installed clips by inserting back edge of fixture to installed clips, then carefully snapping front edge on. For multi-rail systems, see ZipTwo Joiner, page 2.

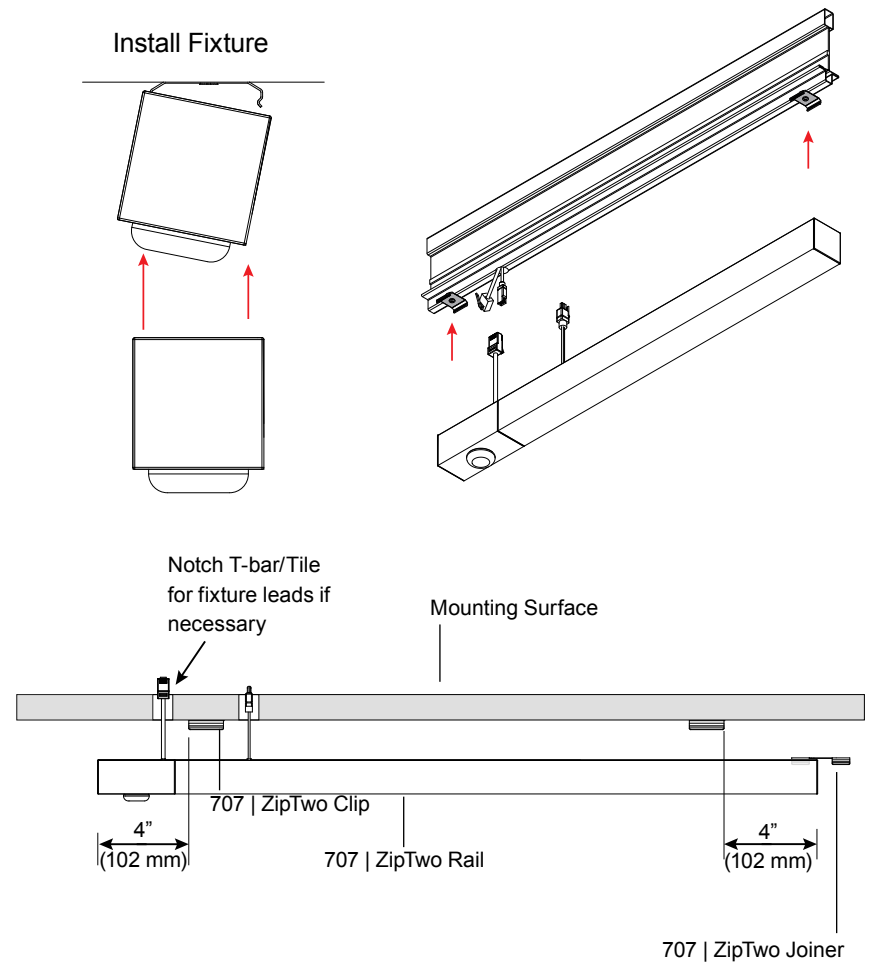

Install Remote Linear Power Supply

IMPORTANT! Before installing any power supply, turn off electricity at circuit box.

Vode recommends keeping track of which lids comes with which housing, as the lid contains important installation labeling.


Using the indicated tab, remove power housing lid to access mounting points. Install power supply housing to desired surface using screws (*provided by others*). Run line, ground and neutral wiring and any applicable dimming controls into power housing through any provided knockout and secure in place, using conduit as necessary per local coding. Use wire nuts (*provided by others*) to make a secure connection between all wiring. (*The provided wire leads are 18 AWG solid core*).

Refer to sensor manufacturer's install guide for detailed sensor calibration and configuration instructions.

DO NOT power on system until instructed.

For remote power supply maximum distance or other wiring questions, please consult Vode Power Guide.

NOTE: If power housing is supplied pre-wired with cord and plug and wire harness installed, skip above steps and power system when instructed by plugging system into a standard outlet.

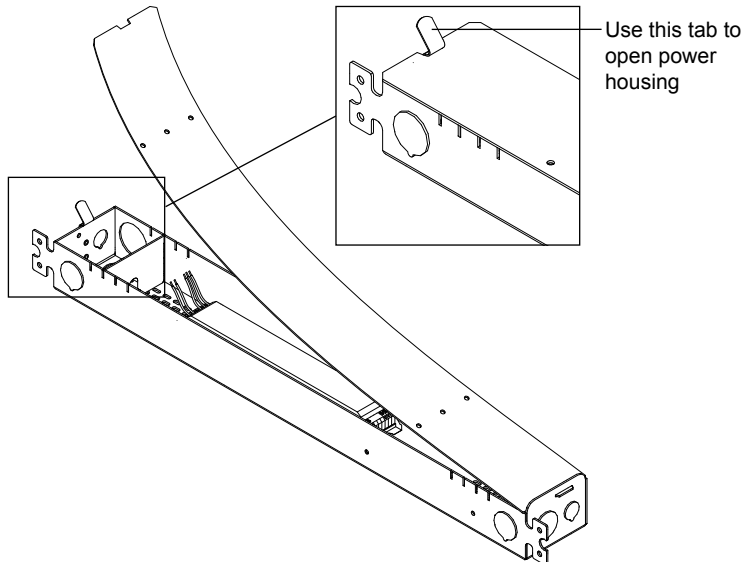


Remote Driver Distance

All Vode linear remote drivers come in a 0.054" (1.4 mm) formed galvanized steel power supply housing with five (5) knockouts: (4) 1-1/8", (1) 7/8" and (1) 9/16". Power supply housing dimensions: 2 3/8" (56 mm) x 1 5/8" (33 mm) x 20 11/16" (525 mm)

Driver	Remote Distance
eldoLED	100' (30.5 m)
Lutron	See Power Guide
Magnitude	100' (30.5 m)
OSRAM	100' (30.5 m)


For other wiring questions and driver specific information, see **Vode Remote Power Guide**.

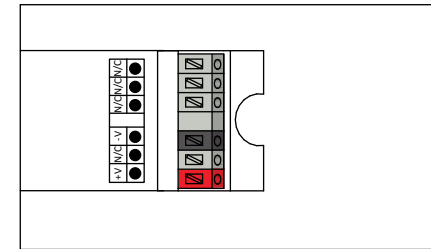

Example Only
See Vode Remote Power Guide for wiring detail.

Sensor	Remote Distance
Enlighted Micro Sensor	100' (30.5 m)
Encelium SensiLUM	100' (30.5 m)
Legrand Wattstopper	100' (30.5 m)
Lutron Athena	100' (30.5 m)
Lutron Vive	60' (18.3 m)
nLight Air	100' (30.5 m)
nLight Wired	100' (30.5 m)


A 0-10V driver with control unit

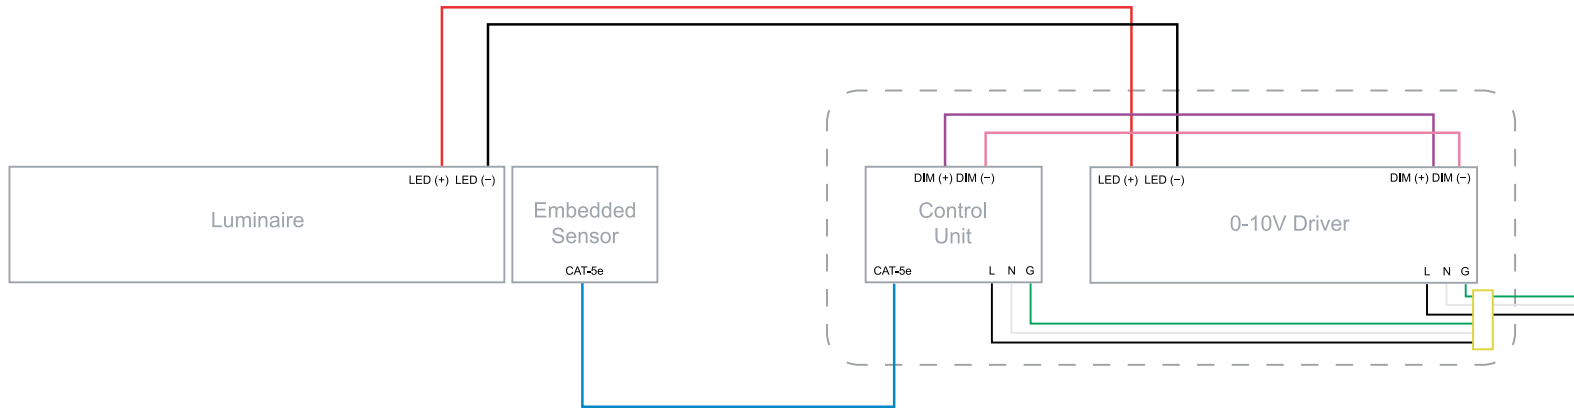


B DALI D4i driver without control unit, 2-wire sensor kit




A 0-10V driver with AUX, no control unit

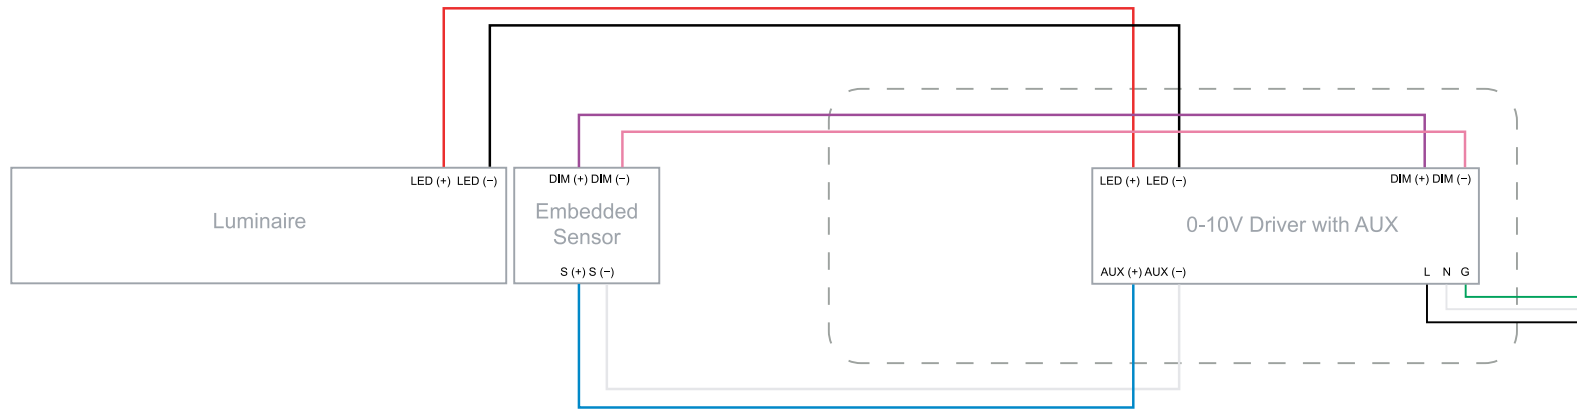


B DALI D4i driver without control unit

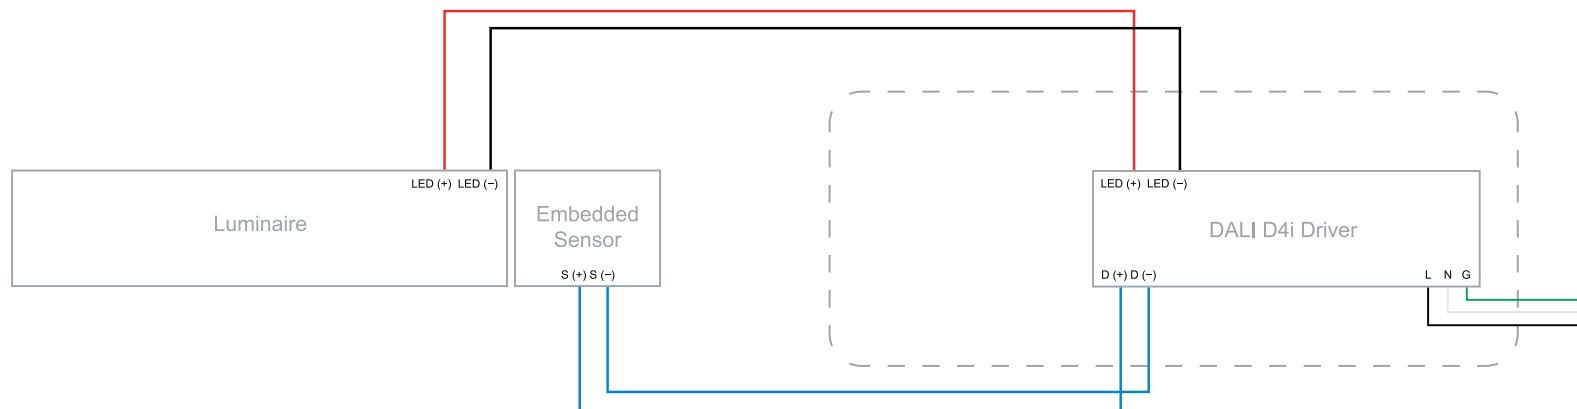

C 0-10V driver with control unit

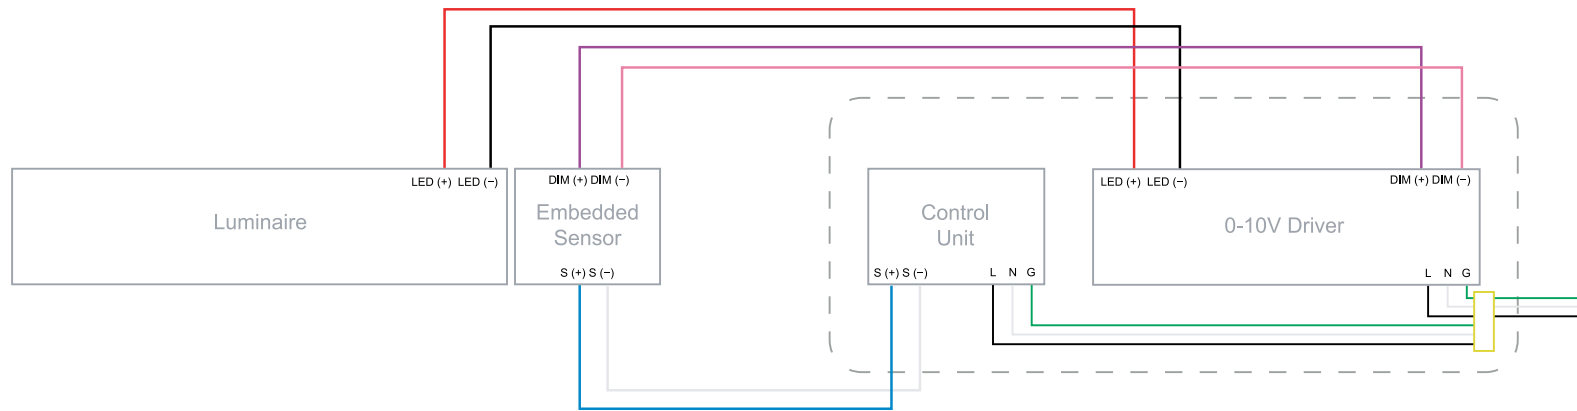


A 0-10V driver with control unit

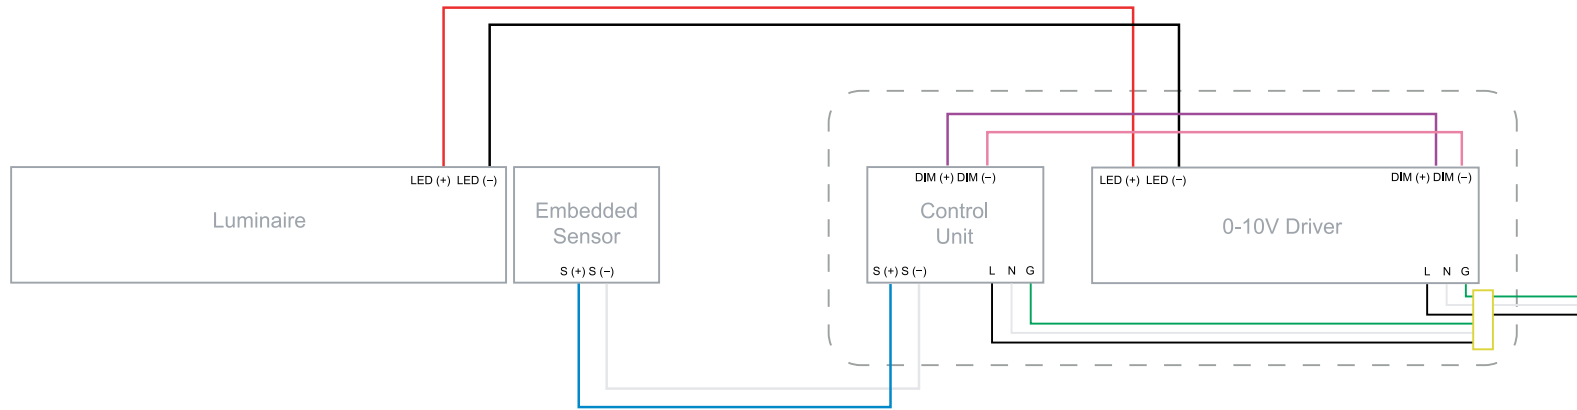


B DALI D4i driver without control unit




A Lutron Ecosystem or DALI driver with control unit

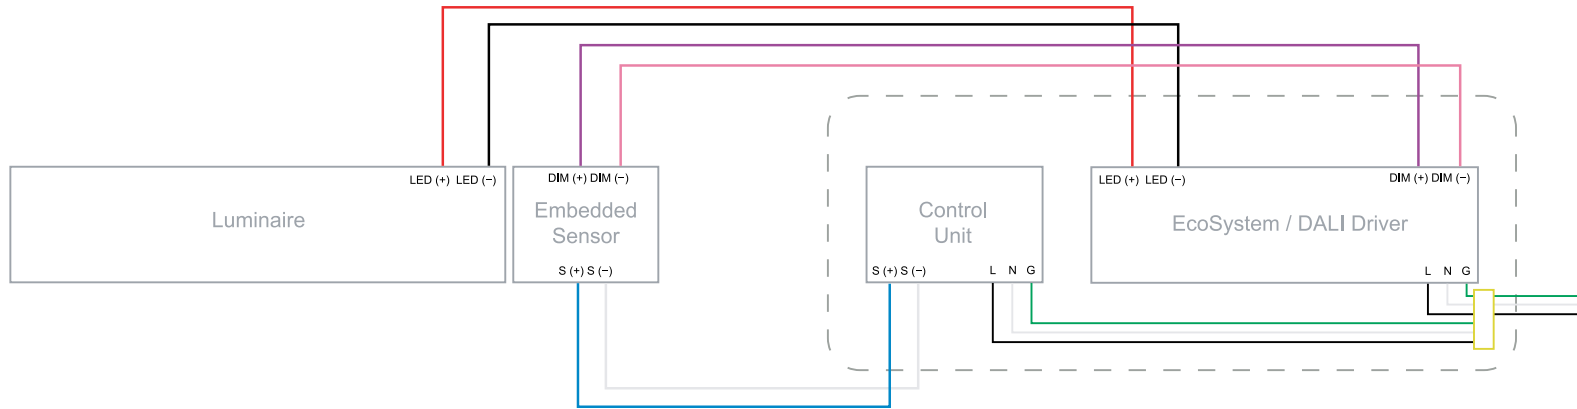


B 0-10V driver with control unit

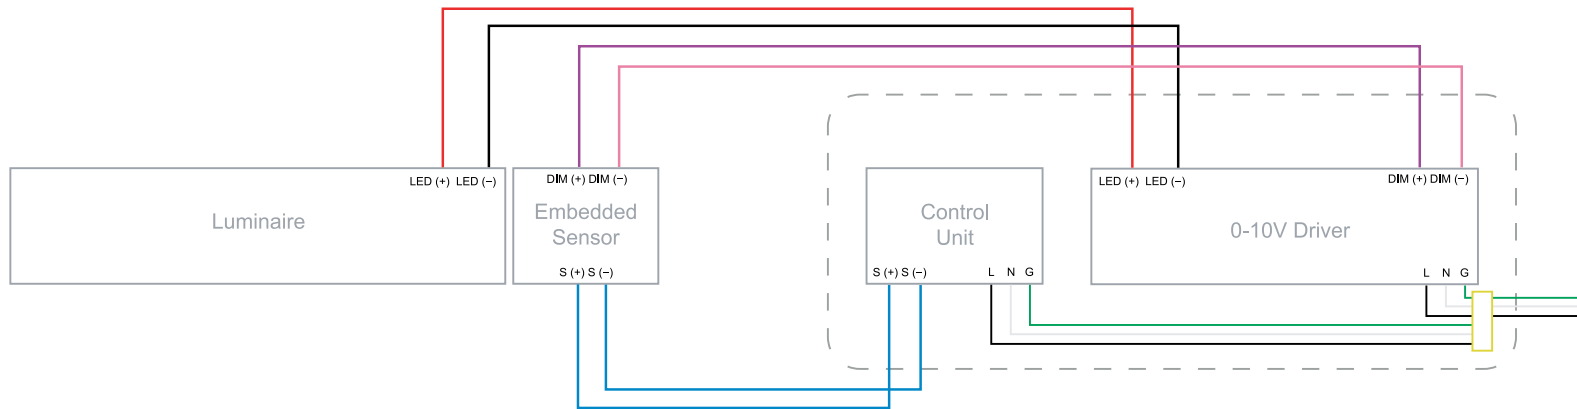


C DALI D4i driver without control unit

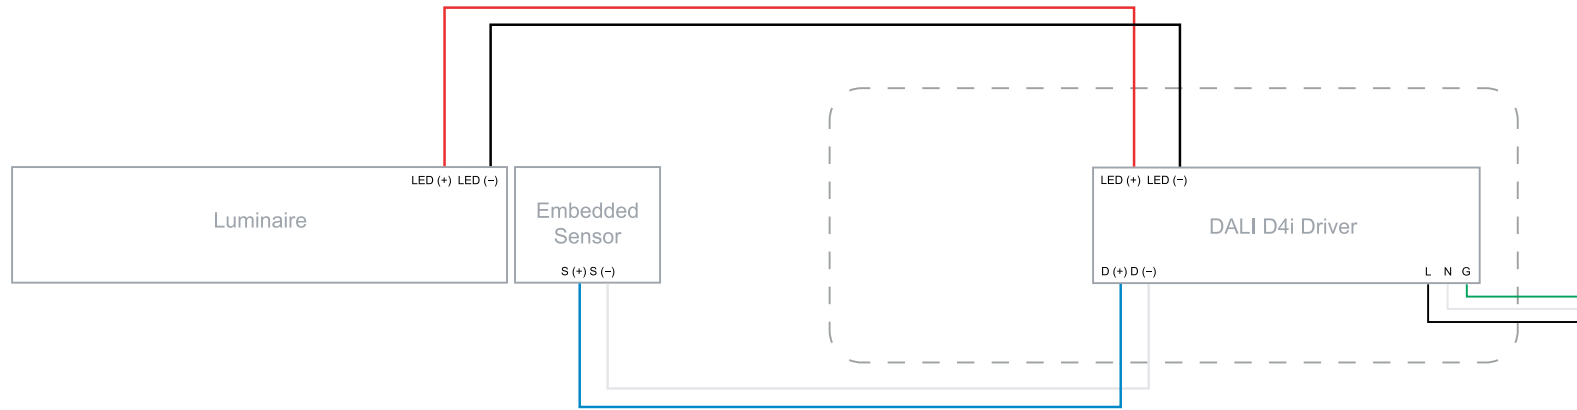


D 0-10V driver with AUX, no control unit

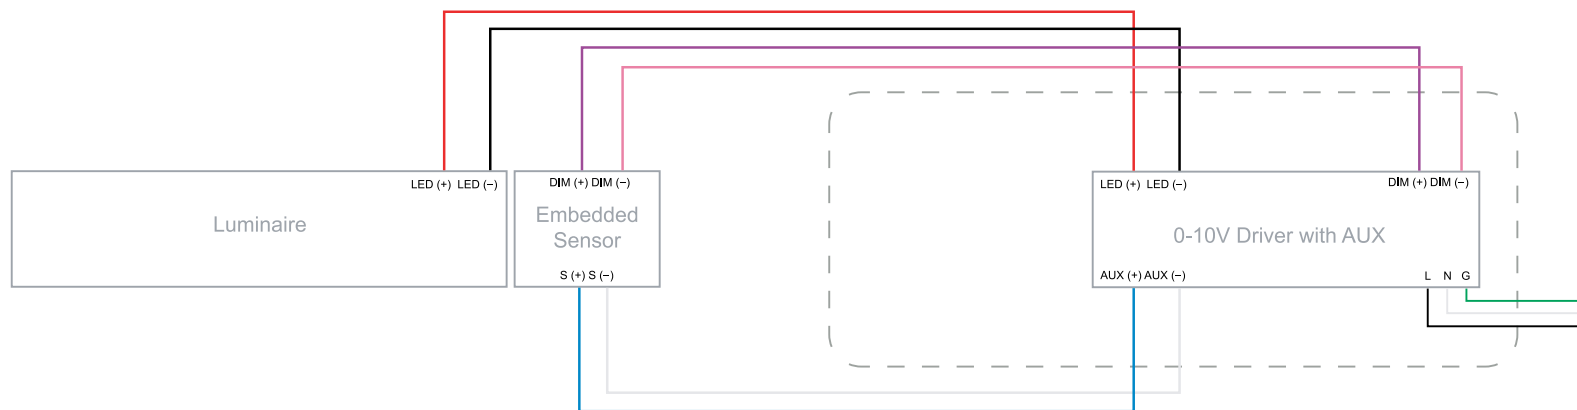


E 0-10V driver with AUX, node only

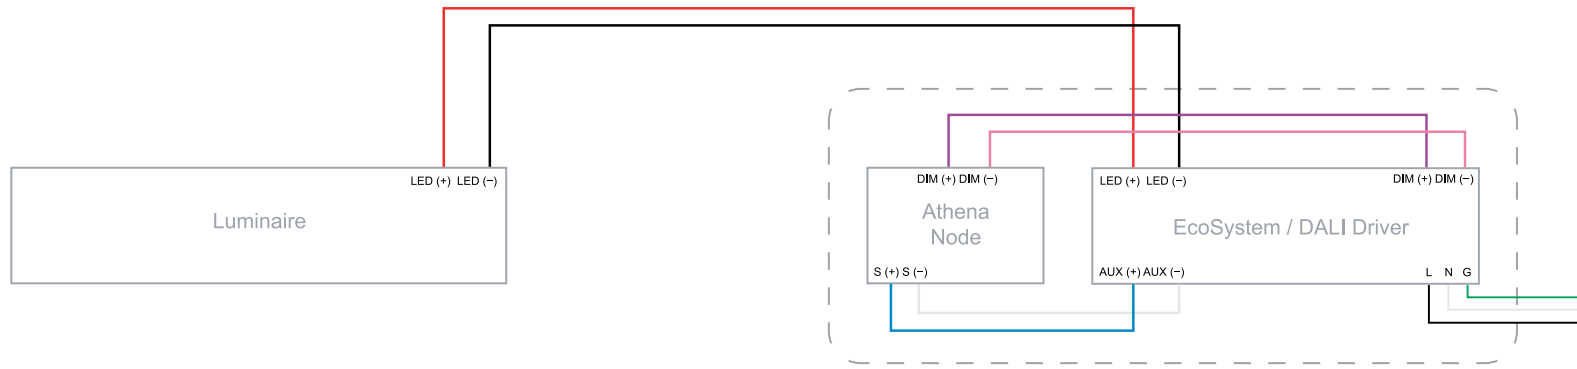


F D4i driver, node only

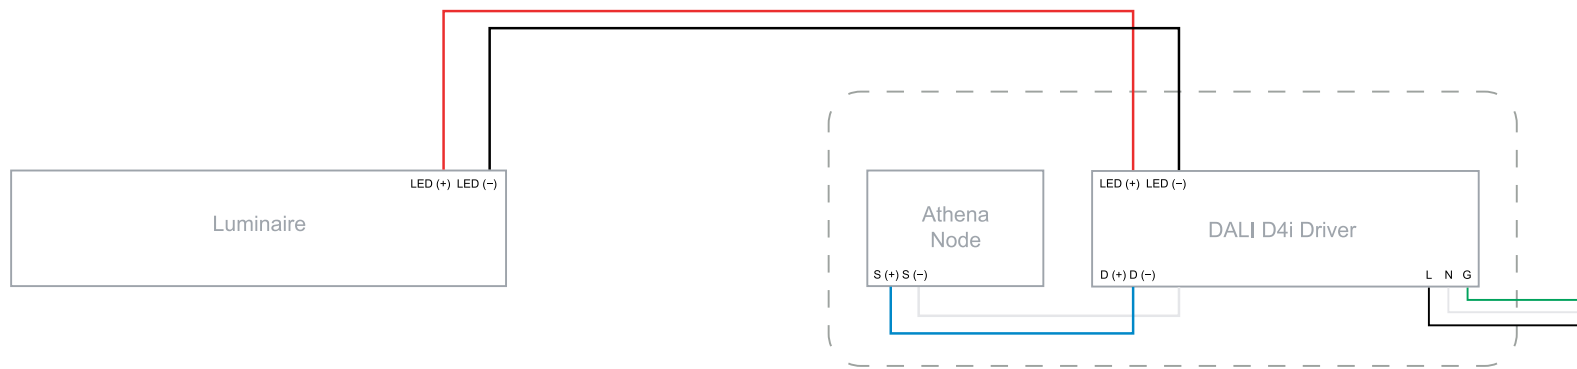


A Lutron Ecosystem or DALI driver with control unit

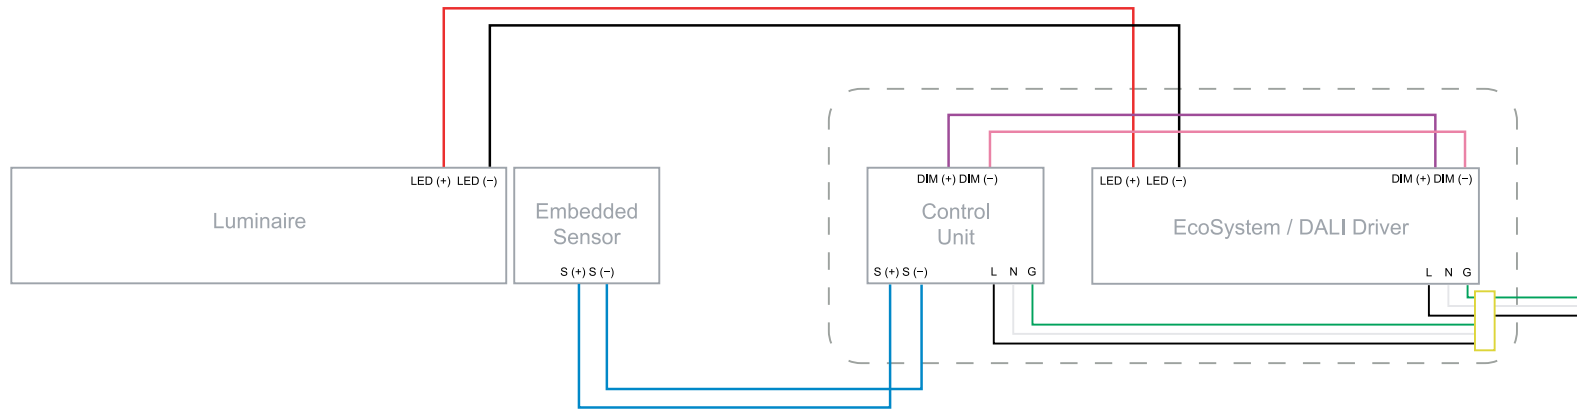


B DALI D4i driver without control unit

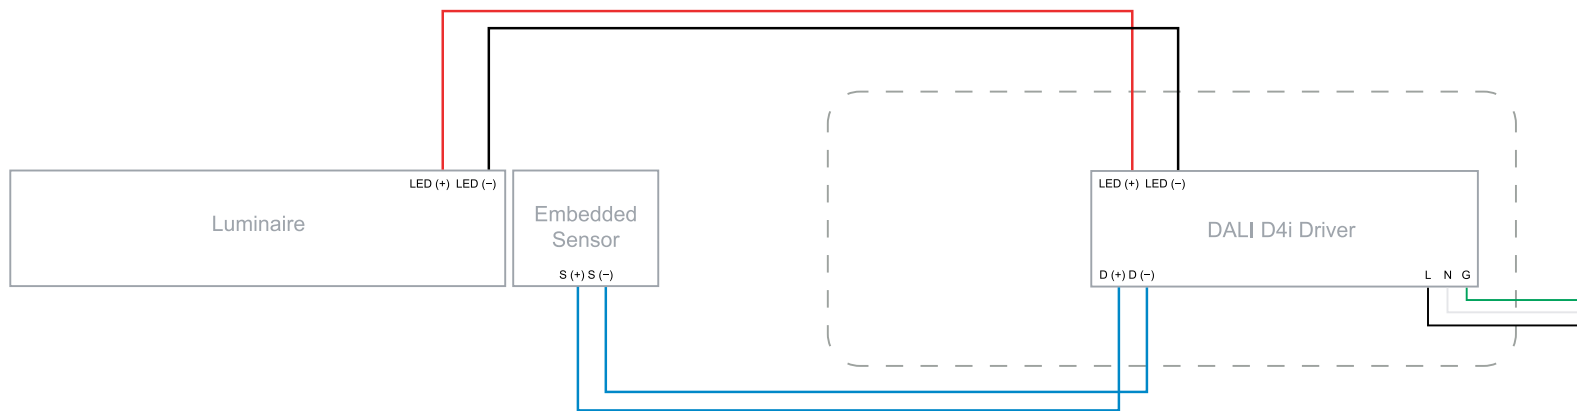


A 0-10V driver with AUX, no control unit

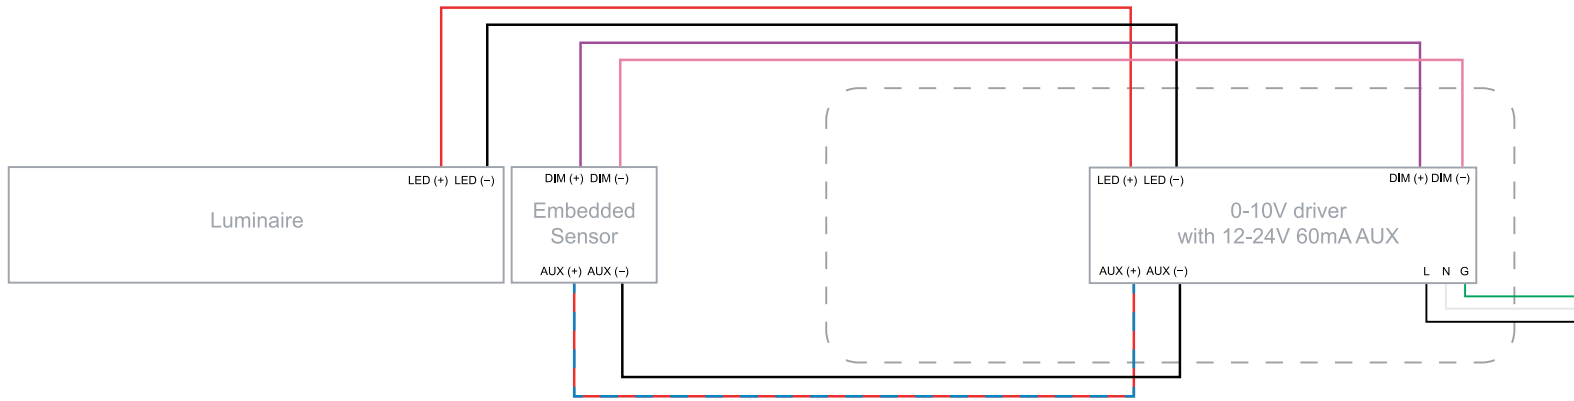


B 0-10V driver with power supply

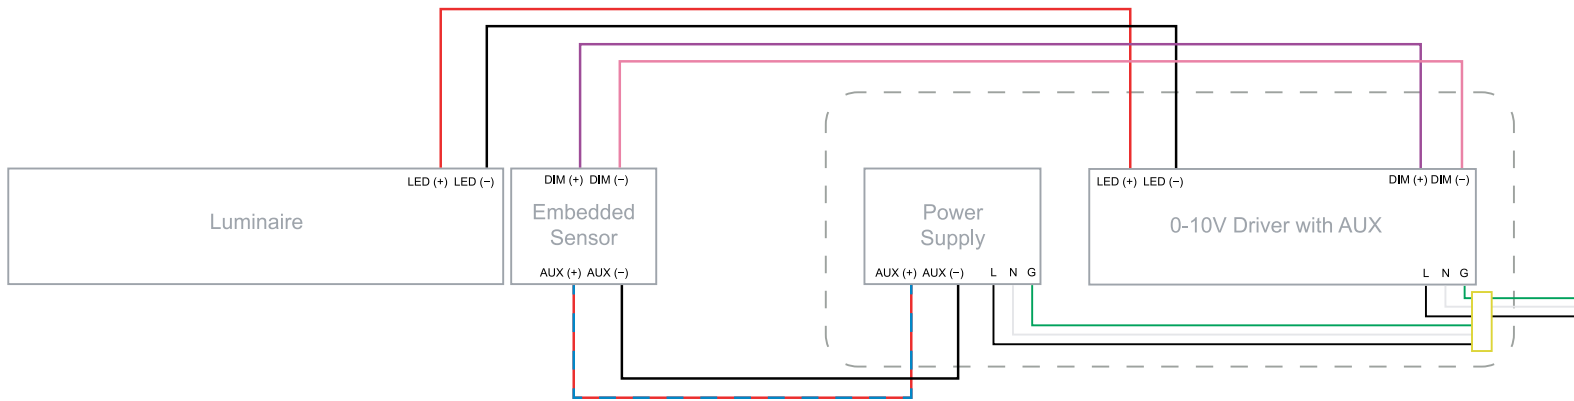


A LEDcode intensity dimming powered by driver AUX

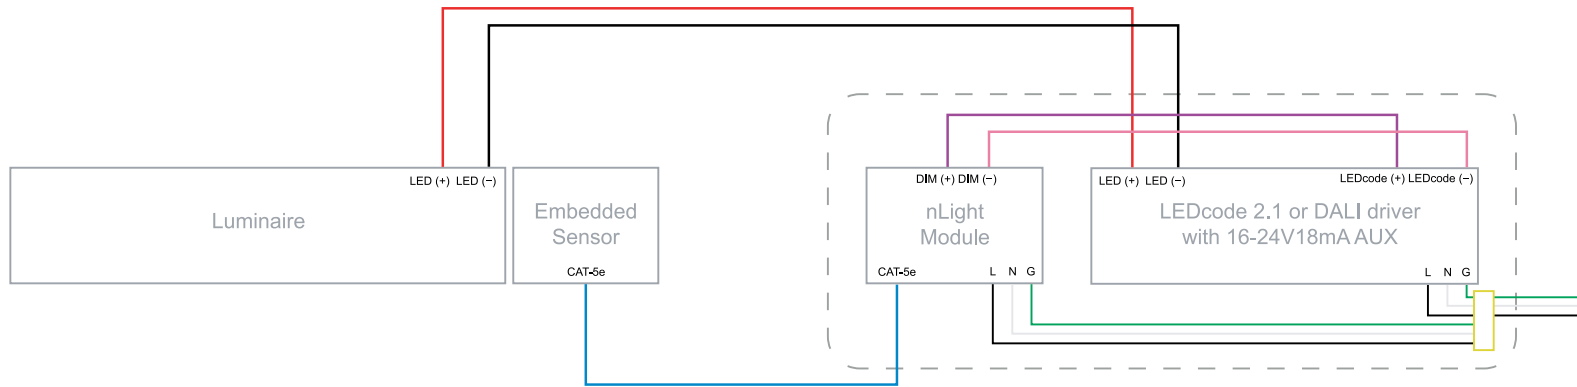

B 0-10V intensity dimming powered by driver AUX

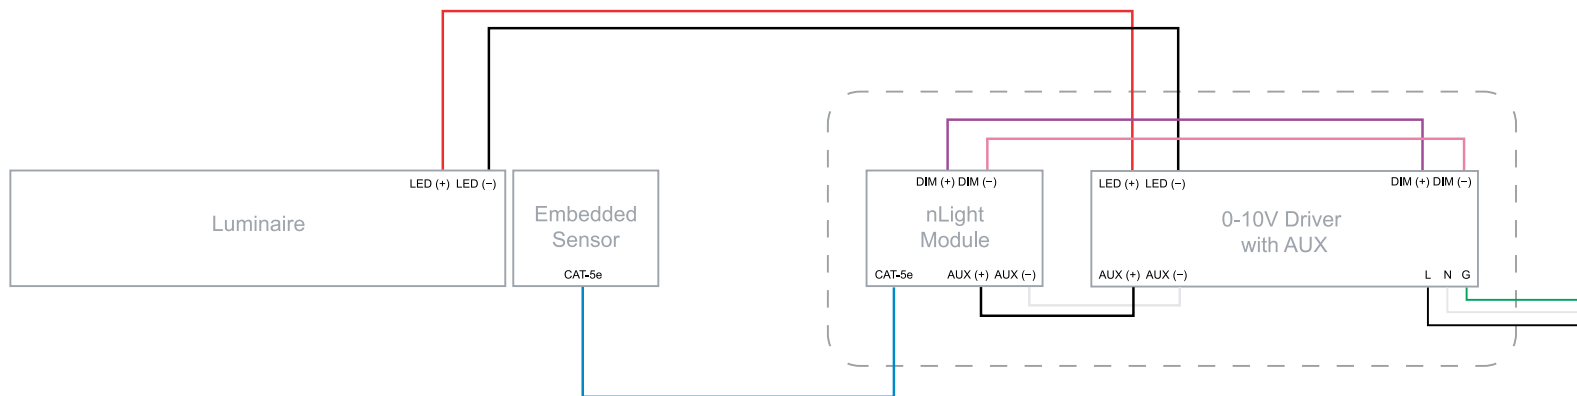

C 0-10V driver with control unit

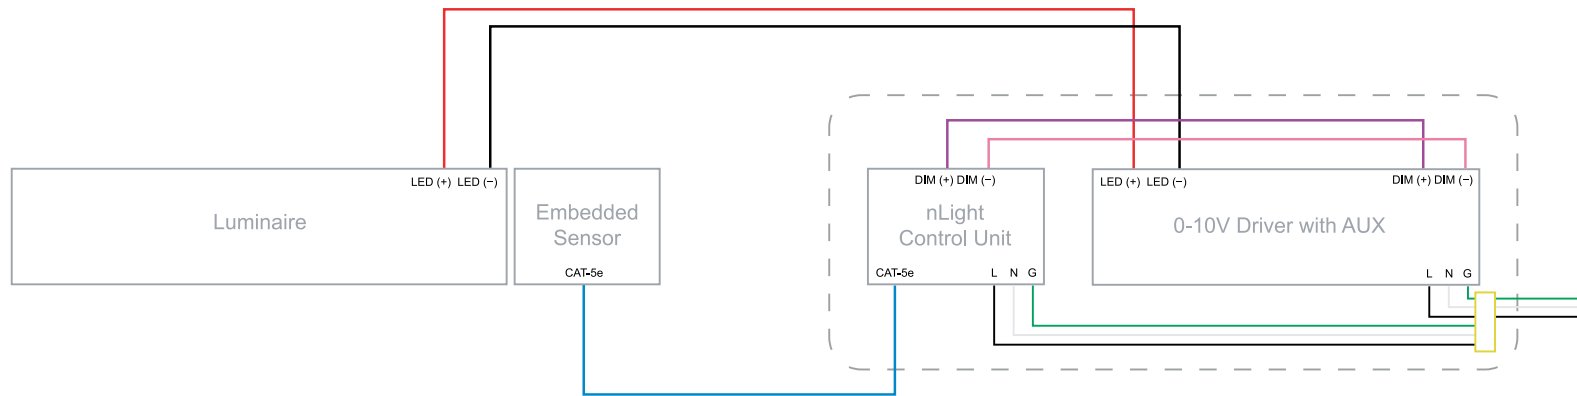

Troubleshooting Guide

My fixture will not turn on:

Check all wiring is correct and all connections are fastened properly.

If all wiring is correct, remove fixture and connect it to a known working driver.

If the fixture lights up, then the problem is with the installed driver or wiring:

- 1) Check line voltage to driver is present.
- 2) Check driver wiring (see **Vode Power Guide** for details) and check wiring to fixture.

If fixture still doesn't light up, check that all dimming wires are installed correctly. Reversed polarity on any driver will cause the entire system to not work, (see **Vode Power Guide** for wiring details).

The fixture is not dimming properly:

Check all wiring is correct and all connections are fastened properly.

Check driver and sensor control wiring (see **Vode Power Guide**, **vodeCONNECT Brochure**) and the sensor control manufacturer's website for further details).

For any help with installation or technical information, contact Vode Tech Service at 707-996-9898.

Important Notes

- Listed to UL standards for damp location by a Nationally Recognized Testing Laboratory (NRTL) recognized by OSHA
- Power Type: Class 2 (<60v) constant current driver.
- Dimming curve is factory preset to linear. Logarithmic is available upon request. See Vode Driver Guide for specific details and wiring diagram.
- Unless specified, one driver and one sensor per rail will be supplied.
- Please consult sensor manufacturer's product technical sheets for additional information.
- 5 Year Limited Warranty. All material and component parts manufactured by Vode are guaranteed to be free from defects of material and/or workmanship for a period of 5 years from date of sale. Product must be installed according to Vode installation instructions and accepted trade practices. Power supplies and other auxiliary equipment are not covered under Vode warranty but may be covered by separate OEM warranty.